

# instructions for barcode readers

---

**HD42A**



## Interface USB



## Interface RS232

