

instructions for barcode readers

HD590A



Interface USB Virtual COM

