

instructions for barcode readers

HD60



Normal mode



Storage mode



Upload data from memory



Memory cleaning



Amount of data in memory

