

instructions for barcode readers

HD8900



Real mode



Storage mode



Upload data from memory



Battery status

