


instructions for barcode readers

HD-MS300



Kontinuierlicher Modus

Continuous mode

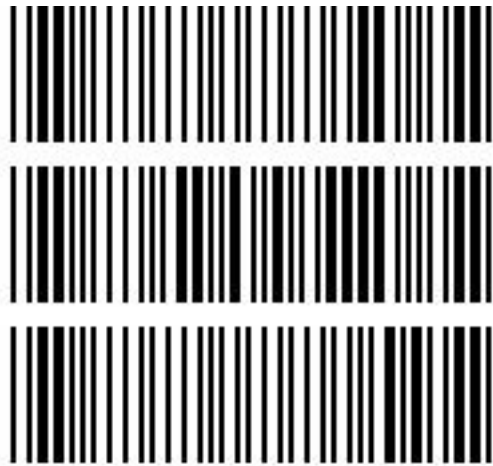

Tastenmodus

Button mode

