


instructions for barcode readers

HD-MS300

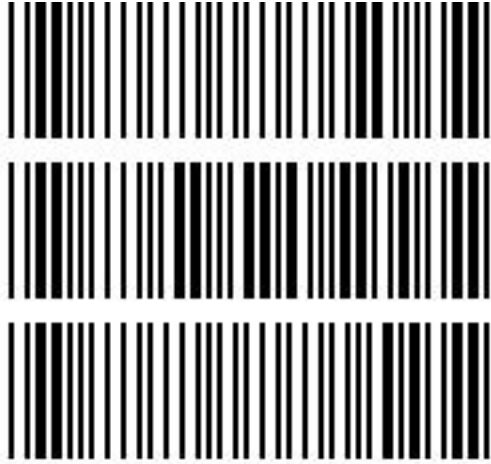


Factory reset




Add Enter Suffix




Delete suffix

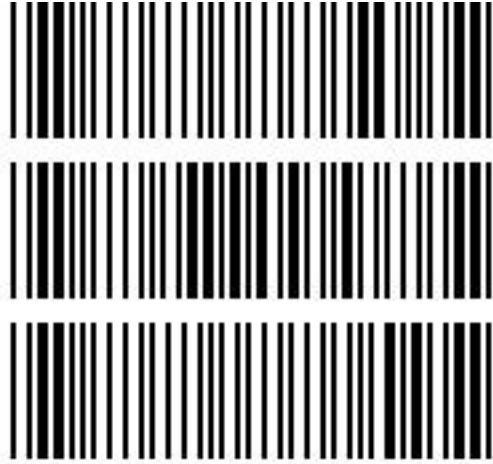


Continuous mode

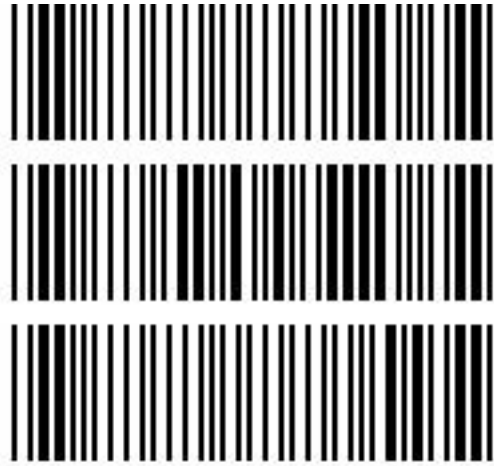

Button mode

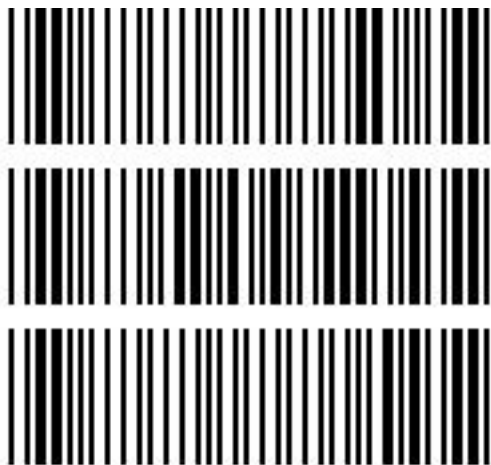

Sound on

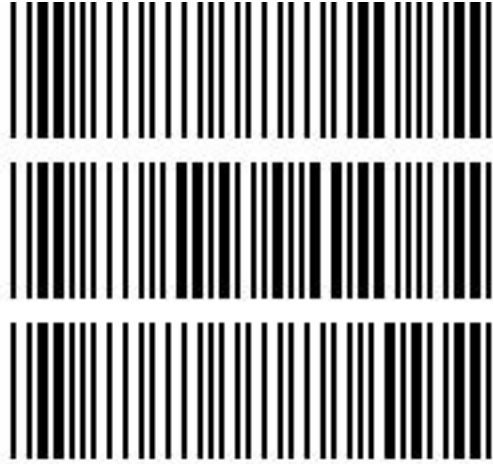

Sound off

