

instructions for barcode readers

HD-S80



High volume



Middle volume



Low volume



Mute volume



High tone



Middle tone



Low tone

