

# instructions for barcode readers

---

**HD-S80**



## High volume



## Middle volume



## Low volume



## Mute volume



## High tone



## Middle tone



## Low tone

