

instructions for barcode readers

HD-S80



Hoog volume

High volume



Middenvolume

Middle volume



Laag volume

Low volume



Volume dempen

Mute volume



Hoge toon

High tone



Middelste toon

Middle tone



Lage toon

Low tone

