

instructions for barcode readers

HD-S90



Auto mode

Automatic mode



Continuous mode

Continuous mode

