

# instructions for barcode readers

---

**HD-S90**



**Baud rate 1200 bits**

**Baud rate 1200 bits**



**Baud rate 2400 bits**

**Baud rate 2400 bits**



**Baud rate 4800 bits**

**Baud rate 4800 bits**



**Baud rate 9600 bits**

**Baud rate 9600 bits**



**Baud rate 19200 bits**

**Baud rate 19200 bits**



**Baud rate 38400 bits**

**Baud rate 38400 bits**



**Data 7 bits**

**Data 7 bits**





**Data 8 bits**

**Data 8 bits**



**1 bit d'arret**

**1 Stop bit**



**2 bit d'arret**

**2 Stop bit**



**AUCUN ensemble de parité**

**NONE parity set**



## **Ensemble de parité ODD**

**ODD parity set**



# Ensemble de parité EVEN

**EVEN parity set**



# **MARK ensemble de parité**

**MARK parity set**



# Ensemble de parité SPACE

**SPACE parity set**





# Poignée de main AUCUN

**NONE handshaking**



## **Handshaking XON / OFF**

**XON/OFF handshaking**



# RTS/CTS handshaking

RTS/CTS handshaking



# Protocole de transfert ACK / NAK

ACK/NAK handshaking



# Poignée de main pendant 2 secondes

Handshaking for 2 seconds



## **Handshaking pendant 5 secondes**

**Handshaking for 5 seconds**



# High transmission

High transmission



# Slow transmission

Slow transmission

