

instructions for barcode readers

HD-S90



Automatische modus

Automatic mode



Continue modus

Continuous mode

