

# instructions for barcode readers

---

**HD-S90**



# Baudhastighet 1200 bitar

**Baud rate 1200 bits**



## **Baudhastighet 2400 bitar**

**Baud rate 2400 bits**



# Baudhastighet 4800 bitar

**Baud rate 4800 bits**



# **Baudhastighet 9600 bitar**

**Baud rate 9600 bits**



# **Baudhastighet 19200 bitar**

**Baud rate 19200 bits**



# Baudhastighet 38400 bitar

**Baud rate 38400 bits**



## Data 7 bitar

Data 7 bits





## Data 8 bitar

Data 8 bits



# 1 Stoppbit

1 Stop bit



## 2 Stoppbit

2 Stop bit



# **NONE paritetsuppsättning**

**NONE parity set**



# ODD paritetsuppsättning

ODD parity set



# ÄVEN paritetsuppsättning

**EVEN parity set**



# **MARK paritetsuppsättning**

**MARK parity set**



# **SPACE paritetsuppsättning**

**SPACE parity set**





**INTE handskakning**

**NONE handshaking**



# **XON / OFF handskakning**

**XON/OFF handshaking**



# **RTS / CTS handskakning**

**RTS/CTS handshaking**



# **ACK / NAK handskakning**

**ACK/NAK handshaking**



## **Handskakning i 2 sekunder**

**Handshaking for 2 seconds**



## **Handskakning i 5 sekunder**

**Handshaking for 5 seconds**



# Hög överföring

High transmission



# Långsam överföring

Slow transmission

