

# instructions for barcode readers

---


**HD-SL21**



## Reading the same code after 50 msec




## Reading the same code after 200 msec

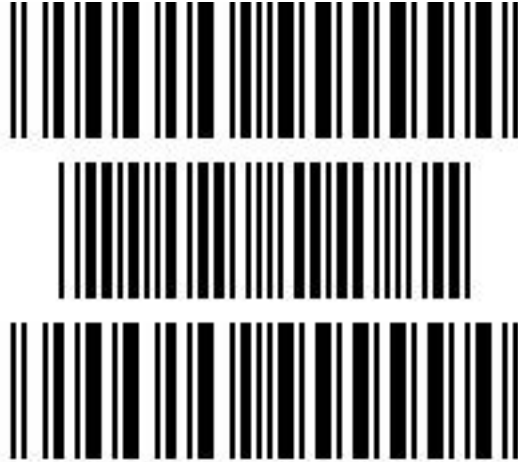

## Reading the same code after 300 msec



## Reading the same code after 500 msec

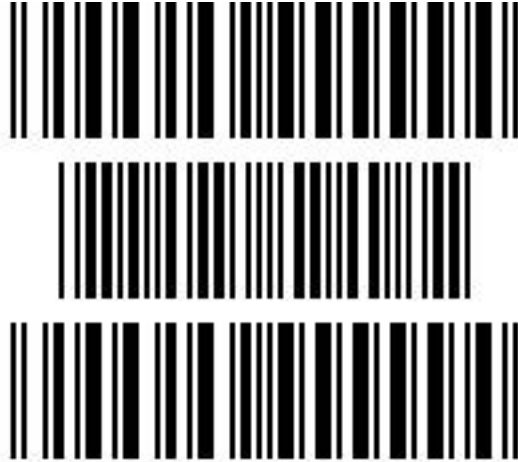

## No reading of the same code



## Enable CapsLock



## Disable CapsLock

