

# instructions for barcode readers

---

**HD-SL21**



## Enable Code39



## Disable Code39



## Enable Codabar



## Disable Codabar




## Enable UPC/EAN/JAN



## Disable UPC/EAN/JAN



## Enable ITF 2of5

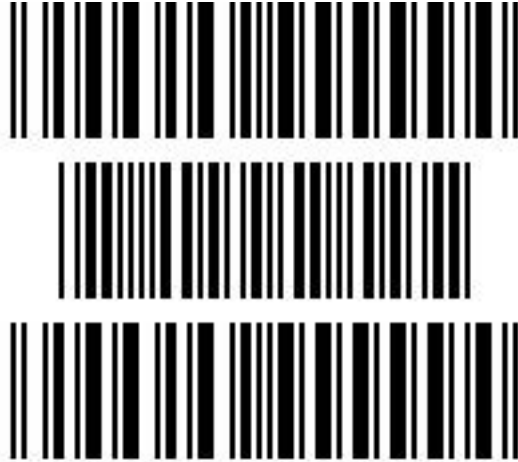



## Disable ITF 2of5



## Enable Code128



## Disable Code128



## Enable Code93



## Disable Code93



## Enable EAN128



## Disable EAN128



## Enable Code32





## Disable Code32



## Enable MSI



## Disable MSI



## Enable EAN convert to ISSN/ISBN



## **Disable EAN convert to ISSN/ISBN**

