


# instructions for barcode readers

---


**HD-SL99**




## Baud rate 4800 bits

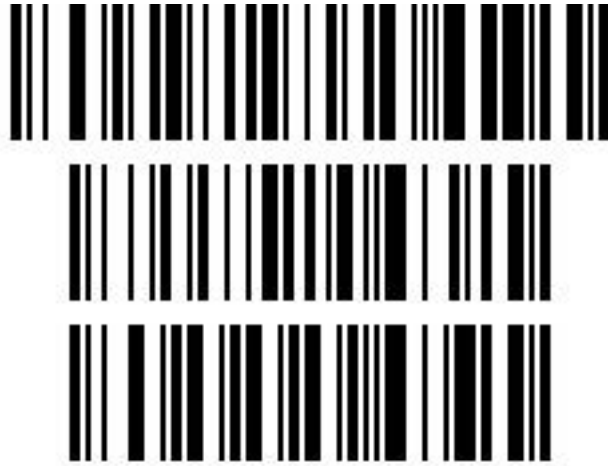


## Baud rate 9600 bits

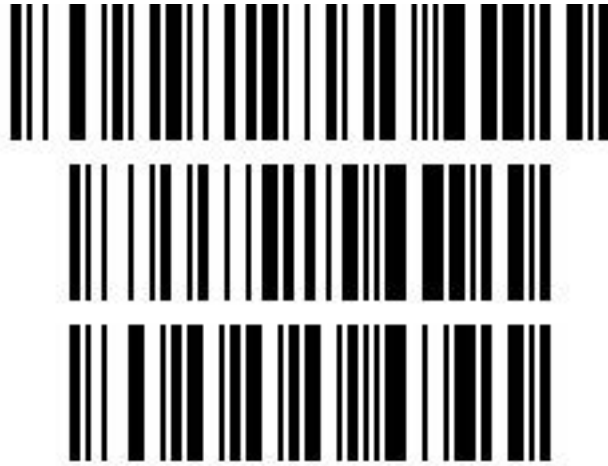


## 19200 hd-sl99

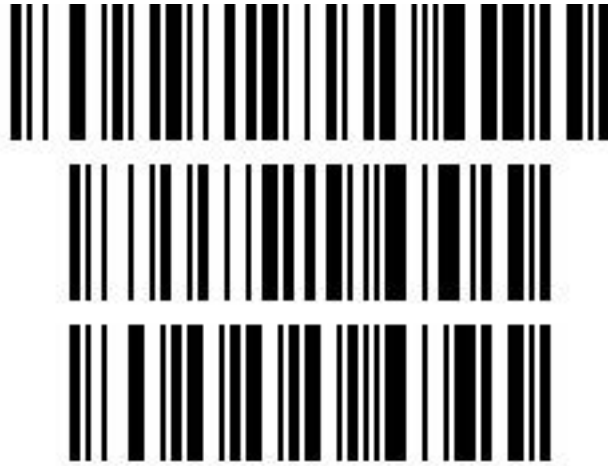


## Baud rate 115200 bits

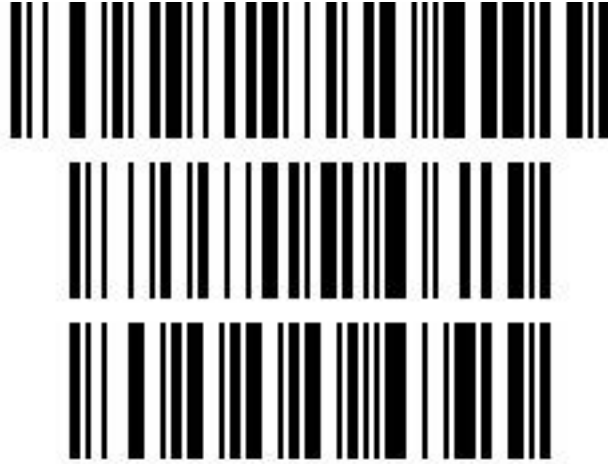


## NONE parity set

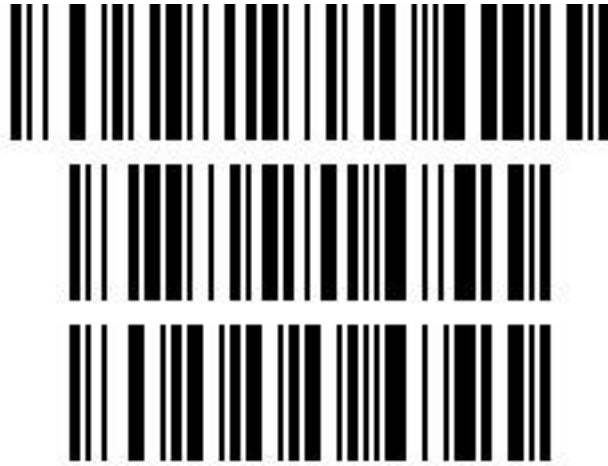

## **EVEN parity set**

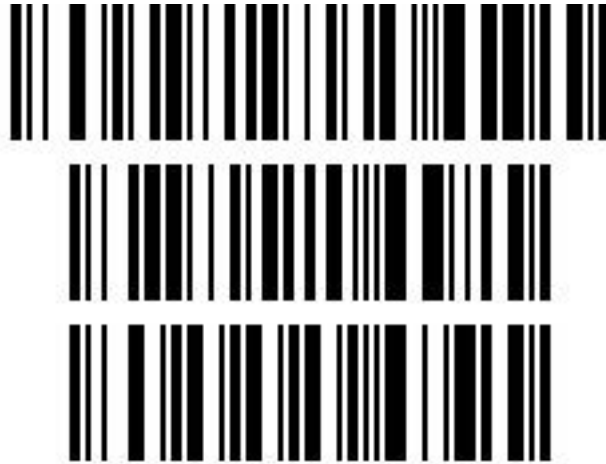


## ODD parity set

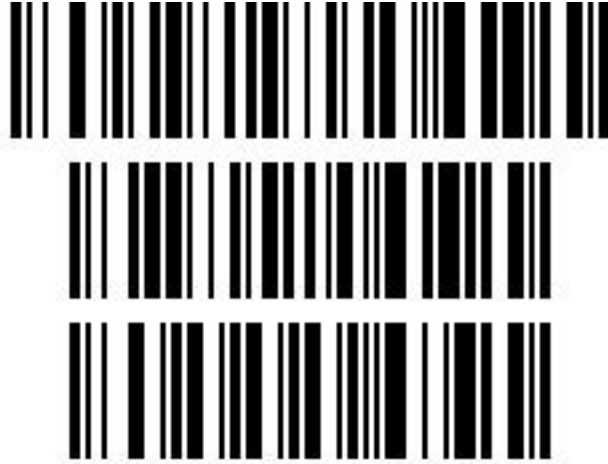





## SPACE parity set

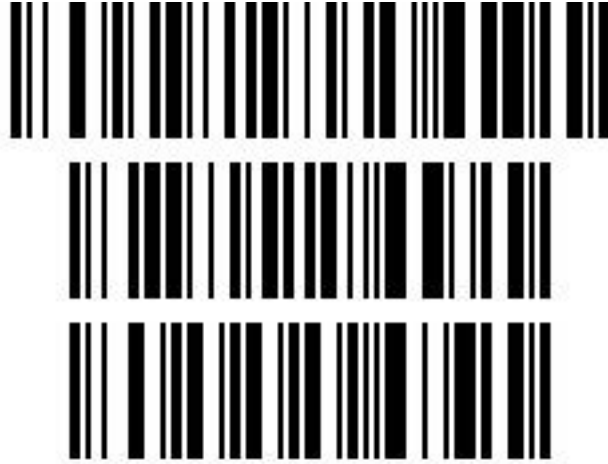

## MARK parity set

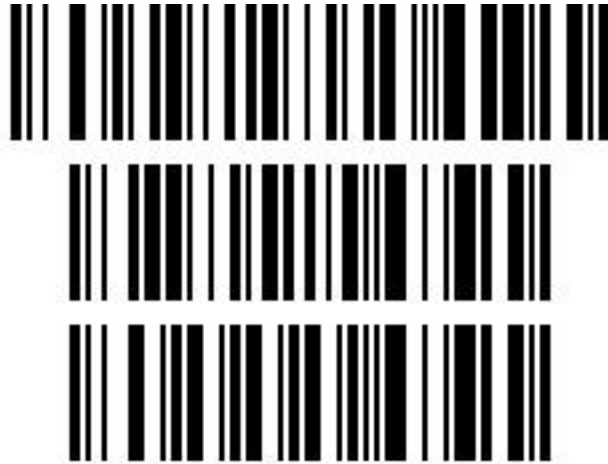

## Enable CTS/RTS

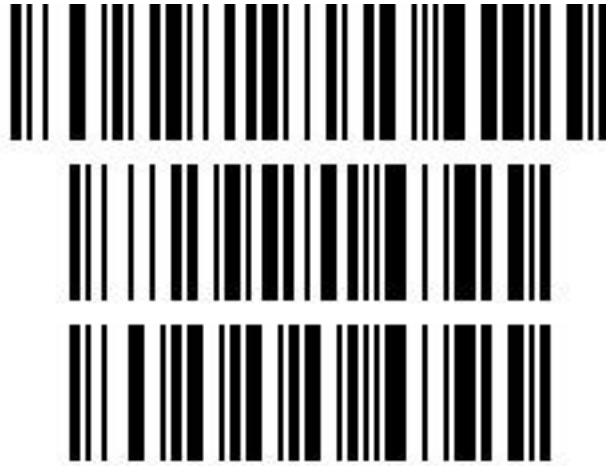

## Disable CTS/RTS

