


instructions for barcode readers


HD-SL99



Normal mode

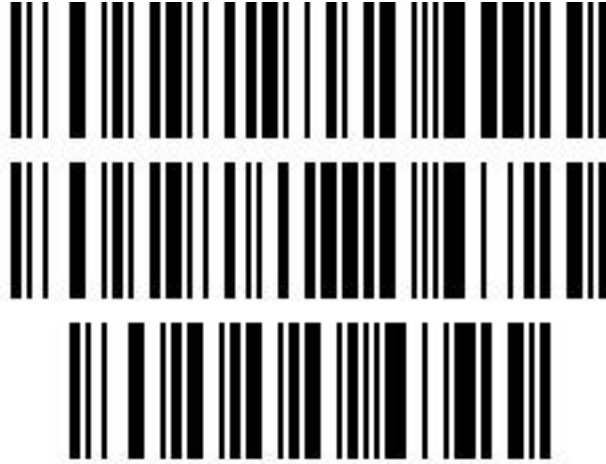

Storage mode

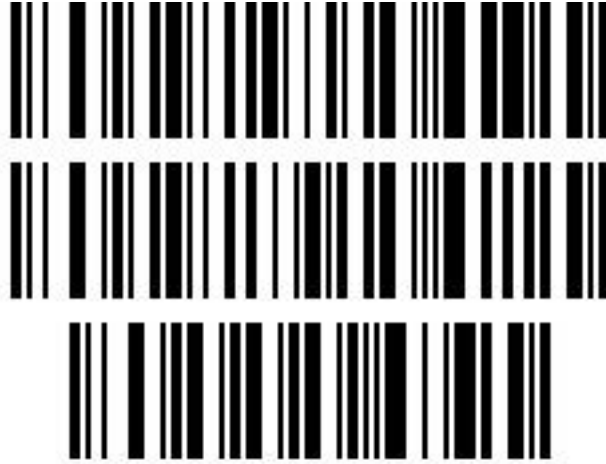

Upload data from memory

