


instructions for barcode readers


HD-SL99

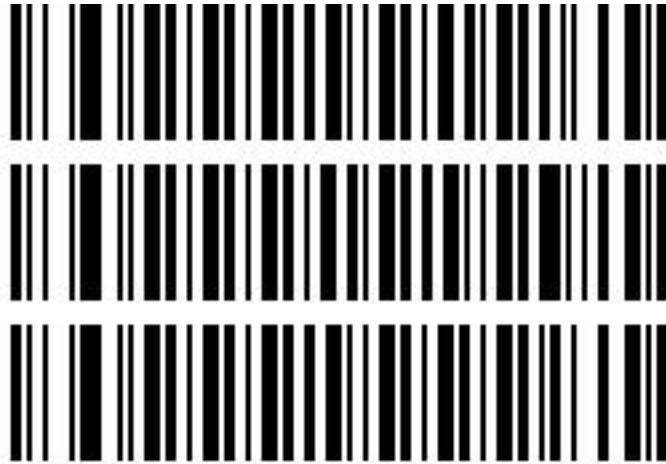


Enable read 2D Codes




Disable read 2D Codes

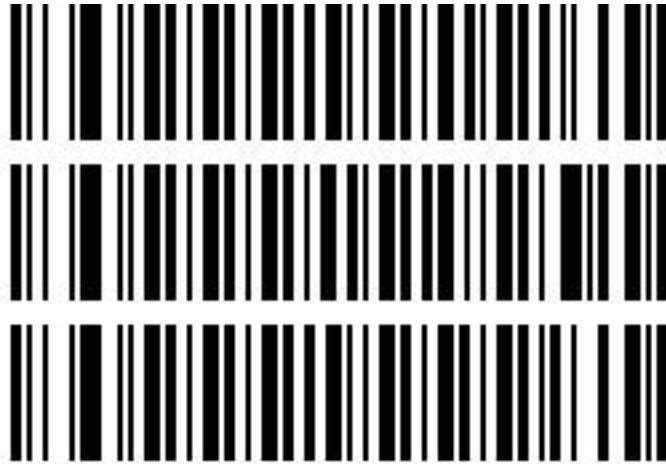

Enable read all Codes

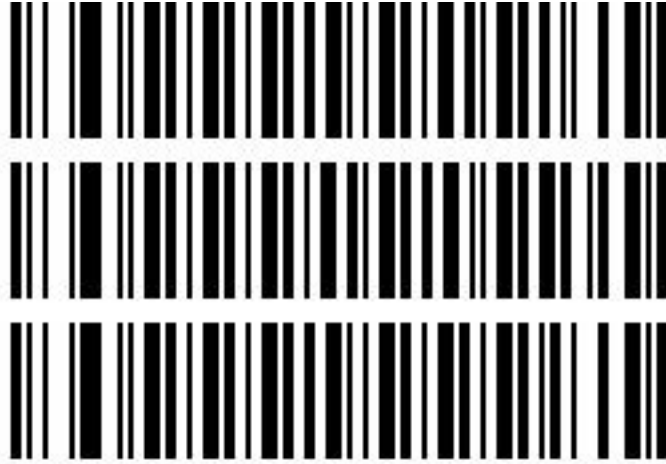

Read only 2D Codes

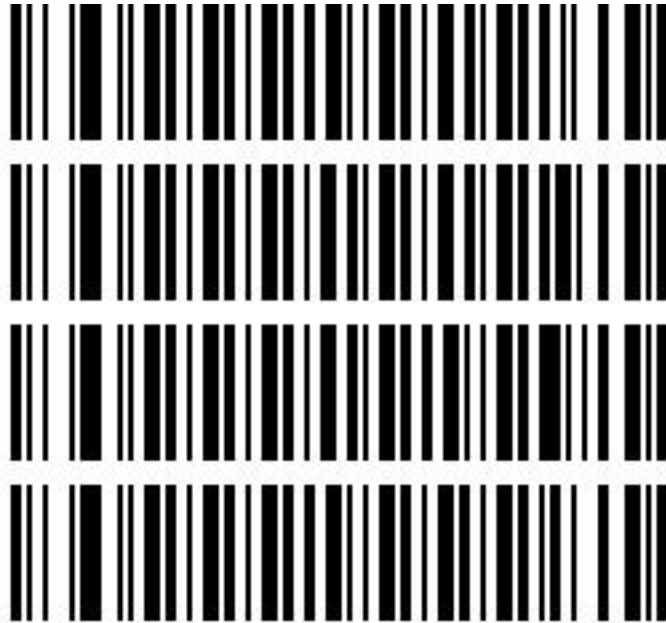

Read only 1D Codes

