

instructions for barcode readers

HD201



Werkseinstellungen zurückgesetzt

Factory reset



USB Virtual COM

USB Virtual COM



RS-232

RS-232



Add Enter Suffix

Add Enter Suffix



Reinigen Sie alle Suffixe

Cancel Enter



Ton an

Sound on



Ton aus

Sound off



Kontinuierlicher Modus

Continuous mode on



Manual mode

Manual mode



Auto mode on

Automatic mode on



Auto mode off

Automatic mode off



Baudrate 9600 Bits

Baud rate 9600 bits



Baudrate 115200 Bit

Baud rate 115200 bits

