

# instructions for barcode readers

---

**HD201**



## Factory reset



## USB Virtual COM



## RS-232



## Add Enter Suffix



## Cancel Enter



## Sound on



## Sound off





## Continuous mode on



## Manual mode



## Automatic mode on



## Automatic mode off



## Baud rate 9600 bits



## Baud rate 115200 bits

