

instructions for barcode readers

HD201



USB Virtual COM

USB Virtual COM



RS-232

RS-232

