

# instructions for barcode readers

---

**HD21**



## Real mode



## Storage mode



## Data upload



## Total data



## Clear data



## **Slow transfer speed from memory**



## Medium transfer speed from memory





## **Fast transfer speed from memory**

