

instructions for barcode readers

HD29A



Interface USB



Interface RS232



Automatic Identification



Interface USB virtual RS232

