

instructions for barcode readers

HD29A



High volume

High volume



Middle volume

Middle volume



Low volume

Low volume



Mute volume

Mute volume



Ton haute

High tone



Ton moyen

Middle tone



Ton bas

Low tone

