

# instructions for barcode readers

---

**HD29A**



**Hoog volume**

**High volume**



# Middenvolume

Middle volume



## **Laag volume**

**Low volume**



# Volume dempen

Mute volume



**Hoge toon**

**High tone**



## **Middelste toon**

**Middle tone**



**Lage toon**

**Low tone**

