

instructions for barcode readers

HD42



Ton bas

Low tone



Ton haute

High tone



Mute volume

Mute volume



Middle volume

Middle volume



High volume

High volume



Low volume

Low volume

