


instructions for barcode readers

HD42A

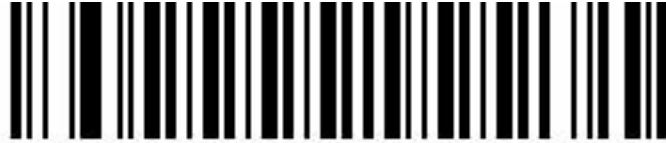

Interface USB



Interface RS232

