

instructions for barcode readers

HD42A



Tono basso

Low tone



Tono alto

High tone



Mute volume

Mute volume



Volume medio

Middle volume



Volume alto

High volume



Volume basso

Low volume

