

instructions for barcode readers

HD42A



Lage toon

Low tone



Hoge toon

High tone



Volume dempen

Mute volume



Middenvolume

Middle volume



Hoog volume

High volume



Laag volume

Low volume

