

instructions for barcode readers

HD43



Shakel Code39 full ASCII in

Enable Code39 full ASCII



Shakel Code39 full ASCII uit

Disable Code39 full ASCII



Shakel UPC to EAN-13 in

Enable UPC to EAN-13



Shakel UPC to UPC-A uit

Disable UPC to UPC-A



Shakel ISBN in

Enable ISBN



Shakel ISBN uit

Disable ISBN



Shakel Code32 in

Enable Code32



Shakel Code32 uit

Disable Code32



Shakel MSI in

Enable MSI



Shakel MSI uit

Disable MSI

