

# instructions for barcode readers

---

**HD610A**



## Factory reset



## Interface USB Virtual COM



## Add Enter Suffix



## Cancel Enter



## Continuous mode on



## Manual mode



## Sound on





## Sound off



## Baud rate 115200 bits



## Baud rate 9600 bits

