


instructions for barcode readers

HD70




Habilitar SPP

Enable SPP

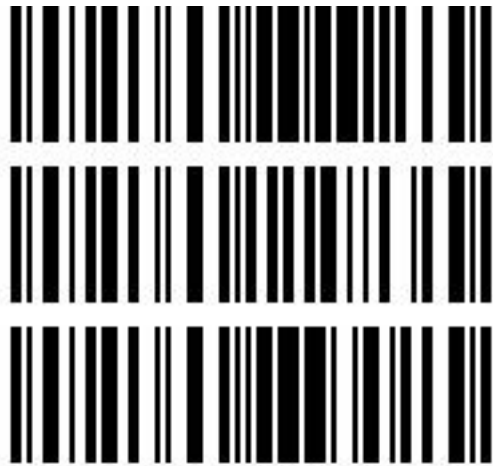

Habilitar HID

Enable HID

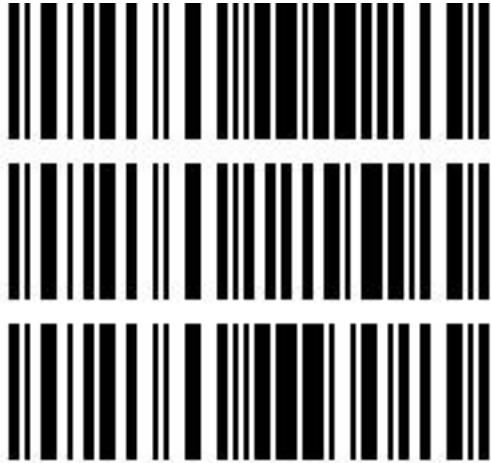

Habilitar identificación automática

Enable Auto identification

