


instructions for barcode readers

HD70




Activer SPP

Enable SPP

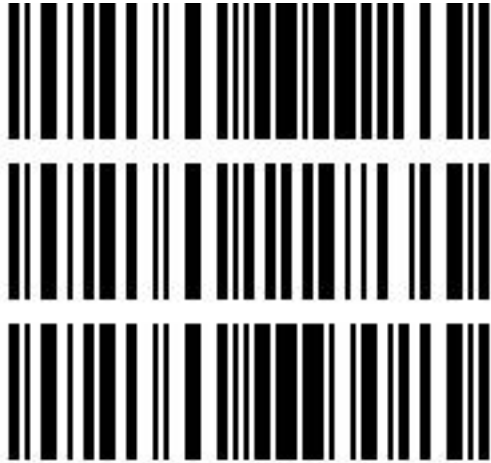

Activer HID

Enable HID

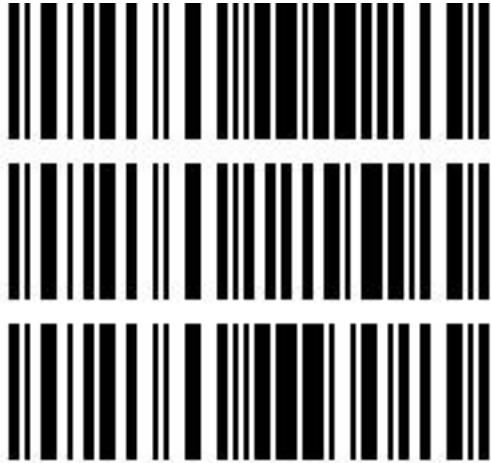

Activer l'identification automatique

Enable Auto identification

