

instructions for barcode readers

HD73



Activer Code32

Enable Code32



Désactiver Code32

Disable Code32



Code39 étendu activé

Extended code39 enabled



Code39 étendu désactivé

Extended code39 disabled



Activer UPC-E a UPC-A

Enable UPC-E to UPC-A



Désactiver UPC-E a UPC-A

Disable UPC-E to UPC-A



Activer UPC-A a EAN13

Enable UPC-A to EAN13



Désactiver UPC-A a EAN13

Disable UPC-A to EAN13



Activer EAN13 a ISSN

Enable EAN13 to ISSN



Désactiver EAN13 a ISSN

Disable EAN13 to ISSN



Activer EAN13 a ISBN

Enable EAN13 to ISBN



Désactiver EAN13 a l'ISBN

Disable EAN13 to ISBN

