

instructions for barcode readers

HD75



Real mode



Storage mode



Upload data from memory



Amount of data in memory



Memory cleaning

