

instructions for barcode readers

HD8900



USB HID Keyboard



USB Virtual RS232

