

# instructions for barcode readers

---

**HD8900**



## USB HID Keyboard



## USB Virtual RS232

