

# instructions for barcode readers

---

**HD8900**



## Real mode



## Storage mode



## Upload data from memory



## Battery status

